

**THE
SHARPER
IMAGE®**

**Shiatsu
Massage Cushion
with Heat**

HF766 Instructions

Read and save these instructions.





Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Our goal is that you will be completely satisfied with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

Since 1977, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver outstanding customer service that exceeds your expectations.

Enjoy your purchase!

Call 1-800-344-4444 for ordering and customer service, or visit
www.sharperimage.com, *our award-winning Website.*



Table of Contents

Important Safeguards	4
Caution.....	7
Grounding Instructions.....	9
General Instructions.....	9
Setup	9
Fastening Straps	11
Hand Controller.....	11
Storing the Cushion.....	15
Cleaning the Cushion	15

IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER — TO REDUCE THE RISK OF ELECTROCUTION:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or showering.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Never use pins or other metallic fasteners with this appliance.
- Keep dry — Do not operate under wet or moist conditions.

IMPORTANT SAFEGUARDS

WARNING — TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:

- An appliance should never be left unattended when plugged in. Unplug from the outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer; specifically any attachments not provided with the unit.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to a qualified service center for examination and repair.
- Keep cord away from heated surfaces.
- Never use while sleeping or fall asleep while using the massager.

IMPORTANT SAFEGUARDS

- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electrocution or injury to persons.
- Do not carry this appliance by supply cord or use the cord as a handle.
- To disconnect, turn all controls to the **OFF** position, then remove plug from outlet.
- This appliance is designed for household use only.
- Do not use outdoors.
- Do not use on an infant or invalid, or on a sleeping or unconscious person.
- Do not use on sensitive skin or on a person with poor blood circulation.
- Do not crush. Avoid sharp folds.



Caution

Please read all instructions carefully before operating:

- If you have any concerns regarding your health, consult your doctor before using this product.
 - Pregnant individuals should consult a doctor before use.
 - Individuals with pacemakers should consult a doctor before use.
 - Never leave the appliance unattended, especially if children are present.
 - Never cover the appliance when it is in operation.
 - Do not use this product for more than 15 minutes at a time.
 - Extensive use could lead to the product's excessive heating and shorter life. Should this occur, discontinue use and allow the unit to cool before operating.
 - Never use this product directly on swollen or inflamed areas, or on skin eruptions.
 - This product is a non-professional appliance designed to provide soothing massage to worn muscles. Do not use this product as a substitute for medical attention.
- 



Caution

- Do not use this product before bed. The massage has a stimulating effect and can delay sleep.
 - Never use this product while in bed.
 - This product should never be used by any individual who has sensory deficiencies in the lower half of their body or who is suffering from any physical ailment that would limit the user's capacity to operate the controls.
 - This unit should not be used by children or invalids without adult supervision.
 - This product is not for use in automobiles.
 - To avoid pinching, do not lean on the dual massage mechanism in the cushion when adjusting your body position.
 - Do not jam or force any part of your body in the moving massage mechanism.
 - All servicing of this unit must be performed by authorized service personnel only.
- 
- 

SAVE THESE INSTRUCTIONS

General Instructions

To reduce the risk of electric shock, this appliance has a polarized plug. The plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, the outlet may not be polarized. Contact an electrician for assistance. Do not modify the plug in any way.

Setup

The Shiatsu Massage Cushion comes with a screw located on the back of the unit to protect the massage mechanism during shipment.

1. Before using the cushion for the first time, remove the screw using the included Allen wrench.
2. Dispose of the screw properly.

Warning: Failure to remove the screw may cause permanent damage to the massage cushion.

3. Plug the cushion into a 120V AC outlet. Attach the cushion to a chair. The massage cushion fits most chairs.

Fastening Straps

The cushion uses unique straps to fasten the cushion to almost any chair. Just slip the straps over the seat or chair and adjust the fastening straps to secure the cushion. This helps prevent the cushion from slipping or sliding.

Notes

- This cushion is not recommended for use on wooden surfaces as the zipper may damage the wood. Caution is recommended when using on upholstered furniture.
- In order to help eliminate any/all risk of injury, only gentle force should be exerted against the unit. You may soften the massage force by placing a towel between yourself and the unit.

Hand Controller

Power Button

To turn on the massage cushion, first press the **POWER** button. The LED indicator illuminates and confirms your selection. To turn the massage cushion off, press the button again. The LED indicator blinks as the dual massage mechanism returns to its lowest point; it will then turn off.

Hand Controller

Note: The moving dual massage mechanism always stops or finishes in its lowest position. It continues to this position after the power has been turned off. If the electrical supply is interrupted, the mechanism will stop or move to its lowest position once the power is restored.

Power Adapter

The massage cushion is powered by a custom 120V AC adapter that is included with the unit.

Demo Button

For a brief demonstration of the features, press the **DEMO** button. The unit completes one cycle of Shiatsu, rolling and vibration massage. Once complete, the unit automatically turns off.

Shiatsu Programs

Choose from three preset programs where the Shiatsu massage travels up and down a specific area of your back. To select a specific program, press the button and the LED illuminates. To stop, press the button again or press another button.

Hand Controller

Spot Shiatsu

When the unit is in Shiatsu massage, press either button to stop and focus the Shiatsu action in one place. Once the unit is operating in Spot Shiatsu, you can adjust the mechanism position by holding down either button until the desired position is reached. The Up Arrow moves the mechanism up and the Down Arrow moves it down. Once you release the button, the mechanism stops in that place.

Rolling Massage

Rolling is similar to two hands or thumbs working up and down your spine.

Rolling Programs

Choose from three preset programs where the Rolling massage travels up and down in a specific area of the back. To select a program, press the button and the LED illuminates. To stop, press the button again or press another button.

Hand Controller

Width Adjustment

While the unit is in Rolling massage, press the button to adjust the distance or width between the massage heads. This adjustment changes the area that is massaged along the spine. With each press, the massage heads move to the next available position.

Seat

To choose vibration seat massage, press the button. Vibration turns on in Low (L) intensity. The corresponding LED illuminates. To change the intensity, continue to press the button and the unit cycles through to Medium (M), High (H), then to Off.

Note: For your safety, there is a 15-minute auto shutoff on the unit.

Heat

For soothing heat when massage is on, simply press the heat button and the corresponding red L.E.D. light will illuminate. To deselect, press the button again and the corresponding L.E.D light will turn off. For your safety, heat cannot be turned on if no massage program is selected.



Storing the Cushion

- Place the massager in its box or in a safe, dry, cool place.
- Avoid contact with sharp edges or pointed objects that might cut or puncture the fabric surface. To avoid breakage, do not wrap the power cord around the unit. Do not hang the unit by the hand-control cord.

Cleaning the Cushion



Before cleaning, unplug the unit and allow it to cool. Clean only with a soft, slightly damp sponge. Never allow water or any other liquid to come in contact with the unit.

- Do not immerse in any liquid to clean.
 - Never use abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinner to clean.
 - Do not attempt to repair the cushion. There are no user-serviceable parts. For service, take it to qualified service personnel.
- 



Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image warrants this product against defects in materials and workmanship. When repair is not practical, The Sharper Image will have the option to replace the defective product with one that is the same or has similar functionality.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@web.sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

© 2007 Sharper Image Corporation

Sharper Image Corporation
350 The Embarcadero, Sixth Floor
San Francisco, CA 94105-1218

Shop online: **www.sharperimage.com**

Actual product may differ slightly from the product described herein.

V1 06/07



Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image warrants this product against defects in materials and workmanship. When repair is not practical, The Sharper Image will have the option to replace the defective product with one that is the same or has similar functionality.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901 West 60th Street
Little Rock, AR 72209

If you have questions, please feel free to contact our customer service representatives at **1-800-344-5555** or by email at **care@web.sharperimage.com**.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

© 2006, 2007 Sharper Image Corporation

Sharper Image Corporation
350 The Embarcadero, Sixth Floor
San Francisco, CA 94105-1218

Shop online: **www.sharperimage.com**

Actual product may differ slightly from the product described herein.

V2 03/07