


# Personal Ultrasonic Humidifier

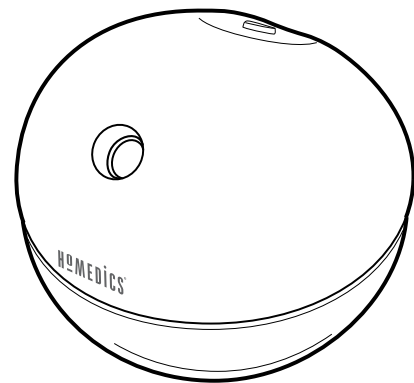

HUM-CM10

Instruction Manual and  
Warranty Information

**1** year  
limited warranty

## IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

## READ ALL INSTRUCTIONS BEFORE USING

## DANGER—TO REDUCE THE RISK OF ELECTRIC SHOCK:

- Always place humidifier on a firm, flat surface. A waterproof mat or pad is recommended for use under the humidifier. Never place it on a rug or carpet, or on a finished floor that may be damaged by exposure to water or moisture.
- Always unplug the unit from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for a unit that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store the unit where it can fall or be pulled into a tub or sink.
- DO NOT place or drop into water or other liquids.
- DO NOT use water above 86° Fahrenheit.

## WARNING—TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- A unit should never be left unattended while plugged in.
- Close supervision is necessary when this unit is used by or near children, invalids, or disabled persons.
- Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by HoMedics; specifically any attachments not provided with this unit.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always hold the water tank firmly with both hands when carrying a full tank of water.
- NEVER use the humidifier in an environment where explosive gasses are present.
- DO NOT place the humidifier near heat sources, such as a stove, and do not expose the humidifier to direct sunlight.
- DO NOT carry this unit by the power cord or use the power cord as a handle.
- To disconnect, turn power button to the "off" position, then remove the plug from the outlet.
- This unit is designed for personal, non-professional use only.
- DO NOT use outdoors. For indoor use only.

SAVE THESE INSTRUCTIONS

## CAUTION—PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATION.

- Never cover the unit while it is operating.
- Always keep the cord away from high temperature and fire.
- If the cord sustains damage, you must stop using this product immediately and contact HoMedics consumer relations (see Warranty section for consumer relations contact information).
- Perform regular maintenance on the ultrasonic membrane.
- Never use detergent to clean the ultrasonic membrane.
- Never clean the ultrasonic membrane by scraping with a hard object.
- Do not attempt to adjust or repair the unit. Servicing must be performed by professional or qualified personnel.
- Stop using this unit if there is an unusual noise or smell.
- Unplug this unit when not in use for a long period of time.
- Do not touch the water or any parts of the unit that are covered by water while the unit is on or plugged in.
- Never operate without water in the tank.
- Only use water in the tank.
- Never use any additive to the water.
- Do not wash, adjust, or move this unit without first unplugging it from the electrical outlet.
- Keep this unit out of reach of children. Do not allow children to use this unit without supervision.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Unique Features and Specifications

### Ultrasonic Technology

This humidifier uses ultrasonic high frequency technology to convert the water into 1-5 million super particles that are dispersed into the air evenly.

### Auto Shut-Off Timer

This humidifier is equipped with an auto shut-off timer/refill reminder. After 7 hours of continuous use, the ON/OFF button will glow red and the humidifier will automatically go into a standby mode as a reminder to refill the unit. When this happens, you must turn the unit off (press ON/OFF button) and refill it before restarting.

### Wicks

Three wicks are included with this unit. One is already installed and there are two replacement wicks for your convenience.

### Run Time

This unit has a run time up to four hours.

### 120V AC and USB Adaptors Included

Perfect for use at Home, in the Office, or On-The-Go



### Voltage

5V DC

### Tank Capacity

200mL – 7/8 Cup

## How to Use

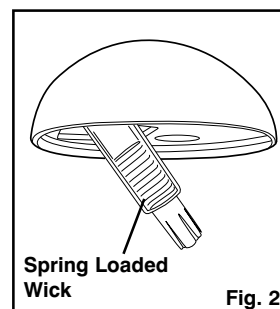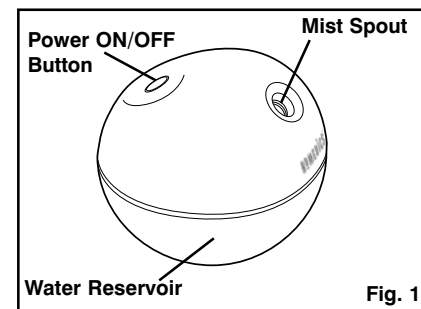

### Power ON/OFF Button

Plug unit in to either a 120 volt AC electrical outlet or USB Port. Push the POWER Button once to turn unit on. Push again to turn the unit off.

### How to Fill

**CAUTION:** Before filling unit with water, turn power off and unplug unit from the outlet.

1. Unscrew the humidifier top cover from the water reservoir by turning the top cover counter-clockwise.

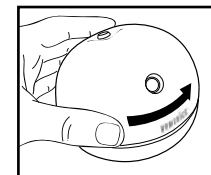


Fig. 3

Lift the top cover off and set aside.

2. **NOTE:** For first time use and with each new wick, you must soak the wick before operating. Unlock the spring loaded wick by turning the wick holder counterclockwise. Remove the wick from the wick holder and soak the wick in water for 5 minutes. Replace the wick into the wick holder and secure to the humidifier top cover by turning clockwise.

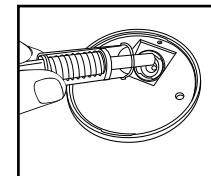


Fig. 4

3. Fill the water tank with clean, cool (not cold) tap water to the MAX FILL line. DO NOT OVERFILL. We recommend using distilled water if you live in a hard water area.

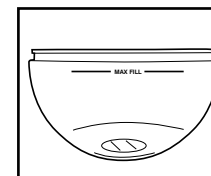


Fig. 5

4. Replace the humidifier top cover by turning clockwise until tight.

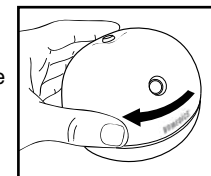


Fig. 6

5. Plug the unit in using either the USB or 120V AC adaptor.

6. To turn on, press the ON/OFF button on the Top Cover. The LED light will illuminate when the humidifier is ON.

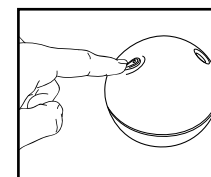


Fig. 7

**IMPORTANT: RESTARTING THE HUMIDIFIER WHEN IT IS ILLUMINATED RED, WITHOUT FIRST REFILLING THE TANK, MAY PERMANENTLY DAMAGE THE HUMIDIFIER.**

### How to Change Wick

1. Remove replacement wick from package and soak in water for 5 minutes.
2. Unlock the spring loaded wick by turning the wick holder counterclockwise and removing from the top cover. (See Fig. 4 above)
3. Remove the old wick from the wick holder and discard.
4. Place the new, soaked wick into the wick holder.
5. Place the wick holder back on the unit and lock into place by turning the holder clockwise.


**NOTE:** To order additional replacement wicks (Model # HUM-CM10WC6), please visit [www.homedics.com](http://www.homedics.com) or HoMedics Consumer Relations at 1.800.466.3342

### Cleaning and Care

**CAUTION:** Before cleaning the unit, turn power off and unplug unit from the outlet.


#### Tank Cleaning

Unscrew the humidifier top cover from the water reservoir by turning the top cover counter-clockwise. Lift the top cover off and set aside. Wipe the reservoir with a soft cloth then rinse it with clean water. Suggestion: Clean the water tank once every two to three weeks, depending on your water conditions.

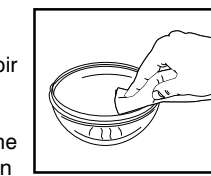


#### Ultrasonic Membrane Cleaning

To clean the ultrasonic membrane, you must first remove the spring loaded wick. To remove the wick, turn the top humidifier cover over. Turn the spring loaded wick holder counterclockwise. Remove the spring loaded wick and set aside.

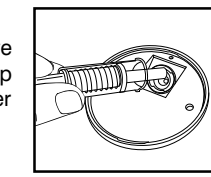


Make a solution of mild dish soap and water. Dip a soft bristle brush into the solution and brush ultrasonic membrane. Wipe clean with a soft cloth.

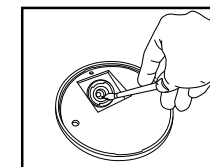

**NOTE:** DO NOT pour water into the ultrasonic membrane or submerge unit in water.

#### Surface Cleaning

Clean the surface of the unit with a clean damp soft cloth.

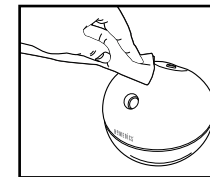

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Power Light is off	<ul style="list-style-type: none"> <li>• Unit is not plugged in</li> <li>• No power at outlet or USB port</li> <li>• Computer may be in Sleep Mode</li> </ul>	<ul style="list-style-type: none"> <li>• Plug unit in</li> <li>• Push POWER button to turn the power on</li> <li>• Check circuits, fuses, try a different outlet or USB port</li> <li>• Open Computer, activate out of Sleep Mode</li> </ul>
Peculiar Odor	<ul style="list-style-type: none"> <li>• If new unit</li> <li>• If unit is in use, the odor may be a dirty water reservoir, old tank water or an old wick</li> </ul>	<ul style="list-style-type: none"> <li>• Open the water reservoir and keep it in a shady and cool place for 12 hours</li> <li>• Empty the old water, clean the reservoir and fill with clean water</li> <li>• Replace with a new wick</li> </ul>
Excessive Noise	<ul style="list-style-type: none"> <li>• Unit is not level</li> <li>• Low water level</li> <li>• Wick was not soaked</li> </ul>	<ul style="list-style-type: none"> <li>• Place unit on a flat, even surface</li> <li>• Check the water level. Refill the reservoir if the water is low</li> <li>• Remove wick, soak for 5 minutes and replace wick</li> </ul>

### LIMITED ONE YEAR WARRANTY

HoMedics sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. HoMedics warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your HoMedics product, contact a Consumer Relations Representative by telephone at 1-800-466-3342 for assistance. Please make sure to have the model number of the product available.

No COD's will be accepted.

HoMedics does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate HoMedics in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of HoMedics.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. HoMEDICS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY. NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, HoMEDICS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of HoMedics.

This warranty provides you with specific legal rights. You may have additional rights which may vary from country to country. Because of individual country regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit: [www.homedics.com](http://www.homedics.com)

HoMedics® is a registered trademark of HoMedics, Inc. and its affiliated companies.  
©2011-2013 HoMedics, Inc. All rights reserved.

IB-HUMCM10C

**E-mail: [cservice@homedics.com](mailto:cservice@homedics.com)**  
**Monday - Friday**  
**8:30am - 7:00pm (EST)**  
**1-800-466-3342**

