

TWO YEAR LIMITED WARRANTY

(Valid in USA only)

HoMedics, Inc., guarantees this product free from defects in material and workmanship for a period of two years from the date of purchase, except as noted below.

This HoMedics product warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of HoMedics. This warranty is effective only if the product is purchased and operated in the USA. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under warranty. HoMedics shall not be responsible for any type of incidental, consequential or special damages. All implied warranties, including but not limited to those implied warranties of fitness and merchantability, are limited in the total duration of two years from the original purchase date.

To obtain warranty service on your HoMedics product, either hand deliver or mail the unit and your dated sales receipt (as proof of purchase), postpaid, along with check or money order in the amount of \$5.00 payable to HoMedics, Inc. to cover handling.

Upon receipt, HoMedics will repair or replace, as appropriate, your product and return it to you, postpaid. Warranty is solely through HoMedics Service Center. Service of this product by anyone other than HoMedics Service Center voids warranty.

For more information regarding our product line in the USA, please visit: www.homedics.com

©1999-2001 HoMedics, Inc. or its affiliated companies, all rights reserved.
HoMedics® is a registered trademark of HoMedics Inc. and its affiliated companies.
JetSpa and The beauty of living well.™ are trademarks of HoMedics Inc. and its affiliated companies.
IB-JET1-D

JetSpa

Luxury Bath Spa



Instruction Manual and Warranty Information

JET-1

2 year
limited warranty

Transform your bath into a personal spa.

Thank you for purchasing JetSpa, the Homedics refreshing home bath jet. This, like the entire Homedics line, is built with high-quality craftsmanship to provide you with years of dependable service. We hope that you'll find it to be the finest product of its kind.

JetSpa turns your bathtub into a whirlpool by adding bubbles or stream water action, providing you with the ultimate sensory experience by helping you to relax, relieve tension and soothe sore muscles.

Relax. Renew. Enjoy.

IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING DANGER:

To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store power pack where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid. Store in dry place.
- Do not attempt to plug or unplug unit while body is in the water.

WARNING:

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Homedics.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to HoMedics Service Center for examination and repair.

- Do not carry this appliance or power pack by supply cord or use cord as a handle.
- Keep cord away from heated surfaces.
- Do not block the air openings of the appliance or power pack, or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep air openings free of lint, hair, dust, etc.
- Do not drop or insert any object into any opening.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electrical shock or injury to persons.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance has a polarized plug (one blade is wider than the other). The plug will fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to defeat this safety feature.
- JetSpa must be connected to 120V electrical supply

SAVE THESE INSTRUCTIONS Please read all instructions carefully before operating.

CAUTION For Household Use Only

SPECIAL WARNINGS:

- Do not insert any object, or material, into JetSpa or power pack.
- This unit is not a toy. Children should not use or play with it.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always unplug the unit when not in use and when cleaning or moving the unit.
- Ensure that your hands are dry when operating the switch or removing the plug.
- Do not cover JetSpa or power pack with any type of material while it is in operation.
- Do not use if you have sensitive skin areas or poor circulation. Use by unattended children or incapacitated persons may be dangerous.
- Do not use while sleeping or drowsy.
- Do not use JetSpa for more than 20 minutes.
- Do not use on the walls of inflatable tubs or pools.

Medical Precautions

- This unit should not be used in the following cases: Tuberculosis, benign and malignant tumors, hemorrhages, inflammations of the skin, phlebitis and thrombosis, open and fresh wounds, bruises, broken skin or varicose veins, or undetermined calf pain.
- Consult your physician if you have any questions regarding therapeutic use of JetSpa.
- Do not use on any part of the body that is anesthetized.
- Do not use on any part of the body where surgery has been performed.
- Do not use on any unexplained pain before consulting your doctor.
- If you have any concerns regarding your health, consult your doctor before using this product.

JetSpa Features

- Dual jets adjust in several directions.
- Variable control to customize your relief from powerful jet stream to gentle bubbles.
- Lightweight, compact and removable

Installation Instructions

1. Be sure that the JetSpa is off and the tub is empty.
2. Place the unit over the edge of the tub so the unit is inside the tub and the arm is resting on the edge. (See Figure 1)
3. Dampen suction cups to improve grip.
4. Secure suction cups and adjust arm to fit on tub.
5. Adjust suction cup on arm so that it adheres directly onto bath tub edge. Water may spray if JetSpa is not level when turned on. Do not over-tighten arm.
6. Adjust arm by pushing release button. (See Figure 1) See diagram on page 6 for the location of the release button.

Suction Cup Position Adjustment

Suction cup underneath the handle is adjustable to 3 positions to suit different bath tubs. Use a Phillips screwdriver to release the suction cup and move it into the position that best suits your tub (See Figure 2).

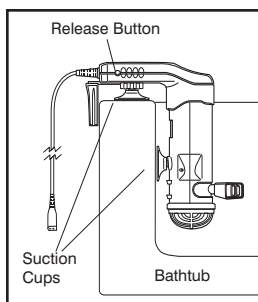


Figure 1

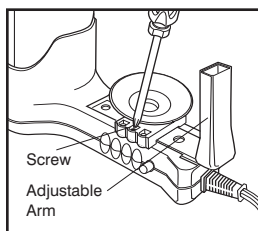


Figure 2

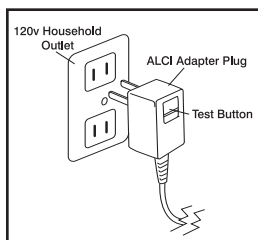


Figure 3

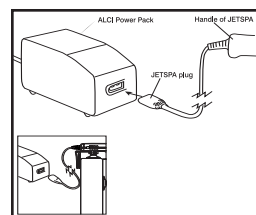


Figure 4

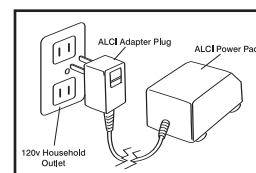


Figure 5

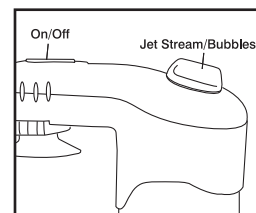


Figure 6

Caution:
All servicing of this JetSpa must be performed by authorized HoMedics service personnel only.

Power Safety and Instructions

This appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders JetSpa inoperable under some abnormal conditions, such as immersion in water.

To make sure the ALCI is functioning properly, perform the following test:

1. Plug in JetSpa and press the test button on the plug (See Figure 3).
2. Appliance will stop working. There will be an audible click and a reset button will pop out.
3. To reset ALCI: Unit should be unplugged. Then push reset button in, and reinsert plug into outlet.
4. If ALCI is not functioning properly, return appliance to HoMedics, Inc. for examination and repair.
5. It is important that if immersion of the transformer of the ALCI occurs, this unit be returned to HoMedics. Do not try to reset.
6. Be sure to repeat test each time you use JetSpa to confirm ALCI is operational. Should the appliance go off and the ALCI reset button pops up during use, this could indicate a malfunction.

Instructions For Use:

1. Place JetSpa in the tub by using the installation instructions on page 4.
2. With the unit securely placed in tub, place the ALCI power pack on counter top or floor, (as far away from tub as possible so that it cannot easily be pulled into tub).
3. Insert JetSpa plug into ALCI (See Figure 4).
4. Plug ALCI into 120V household outlet (See Figure 5).
5. Fill the bath tub with water to the line indicated on the unit.
6. Press the "on" button and set the control to the desired setting (jet stream or bubbles).

CAUTION: If JetSpa falls into the tub during use do not panic. JetSpa has been designed to withstand submersion for short periods of time without danger. Remove unit from tub immediately and press off button. Unplug ALCI power pack. Remove JetSpa from the water and hold it over tub, rotating gently to remove excess water from housing. When water is completely emptied from unit, reinstall JetSpa per operating instructions.

JetSpa™

Luxury Bath Spa

DO NOT REACH FOR POWER SUPPLY WHILE IN TUB. DO NOT DISCONNECT POWER UNTIL POWER IS TURNED OFF. IF UNIT HAS BEEN IMMERSUED FOR MORE THAN 5 MINUTES, REMOVE UNIT FROM THE TUB, PRESS THE "OFF" BUTTON, DISCONNECT POWER CORD FROM ALCI POWER PACK, DRAIN WATER FROM UNIT AND STORE IN A DRY PLACE FOR AT LEAST 24 HOURS BEFORE NEXT USE.

JetSpa Maintenance

Keep the JetSpa clean and clear of obstructions. Check the outflow control frequently for potential obstructions, including lint and hair, that could block air or water flow. We recommend cleaning JetSpa after each use with mild detergent or soap.

1. Unplug the unit and allow it to cool before cleaning. Clean only with a soft, slightly damp sponge. Note: Do not use abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinner to clean.
2. JetSpa should also be disinfected periodically to keep it bacteria free. Follow a disinfecting schedule of once per week if the unit is used frequently, (3 or more times / week). Disinfect after each use when the JetSpa is used only occasionally.

Do not attempt to repair JetSpa. There are no user serviceable parts. For service, send the unit to the HoMedics' address listed in the warranty section.

On/Off

To turn on the JetSpa press the POWER button.

Variable Control

Customize your relief from powerful jet stream to gentle bubbles.

Dual Jets

Jets adjust in several directions to direct powerful comfort where you need it most.

Release Button

Adjusts quickly to accommodate any standard size tub.

Suction Cups

Keep JetSpa securely mounted.

Fill Line

Fill the bathtub with water to this line.

